

Subaru Outback (2017 2.5L)

PCV Valve & Hose Replacement Guide

Tools Required:

- 19mm deep socket
- 3/8" ratchet
- 3–6" extension
- Needle nose pliers
- Flathead screwdriver (optional)
- Torque wrench (recommended)

Parts Required:

- PCV Valve — 11810AA131
- PCV Hose — 11815AC67A

Before You Start:

- Engine should be cool
- No sealant or Teflon tape needed

Steps:

1. Remove engine cover if equipped.
2. Locate PCV valve (rear driver side near firewall).
3. Remove PCV hose (twist and pull).
4. Remove PCV valve with 19mm socket.
5. Install new PCV valve (hand thread, then torque 18–22 ft-lb).
6. Install new hose (ensure proper routing and fit).
7. Reinstall engine cover.
8. Start engine and check for leaks.

Notes:

- Replace hose to avoid brittleness issues.
- Do not overtighten valve.